



Bugflector® / Bugflector II® Carflector™

Quick and Easy Installation Instructions

CONTENTS

- (1) Bugflector
- (4) bump-ons
- (5) screw fasteners
- (1) instruction sheet

IMPORTANT: Read all instructions carefully before beginning installation.

STEP 1

Raise the hood. Locate the rubber seal and carefully remove from the hood. See **FIGURE 1**.






STEP 2

Set the Bugflector in place. See **FIGURE 2**. Secure the Bugflector to the hood at the ends with (2) screw fasteners using attachment method A. See **FIGURE 3**. Set the rubber seal back in place over the Bugflector and insert the (3) remaining screw fasteners using attachment method B. See **FIGURE 3**.

STEP 3

To reduce vibration, adhere the Bump-ons at pre-cleaned locations on the hood surface where the Bugflector may contact. If the hood will not shut properly, it may be necessary to adjust the hood bumper stops (refer to your owner's manual). See **FIGURE 4**.

NOTE: Actual application may vary slightly from pictures.

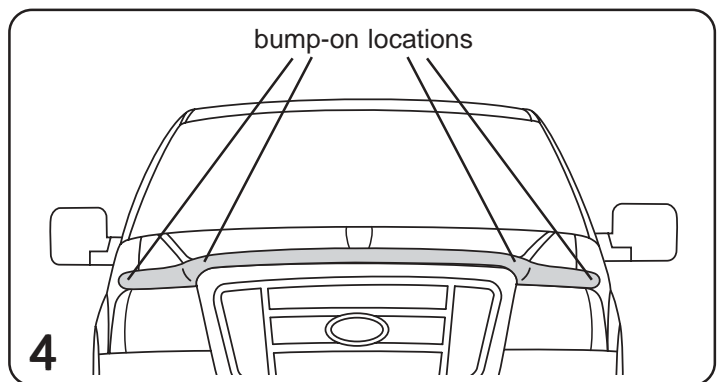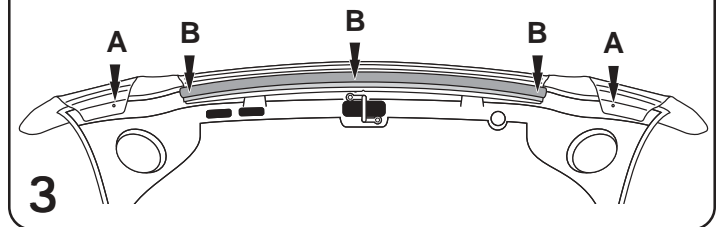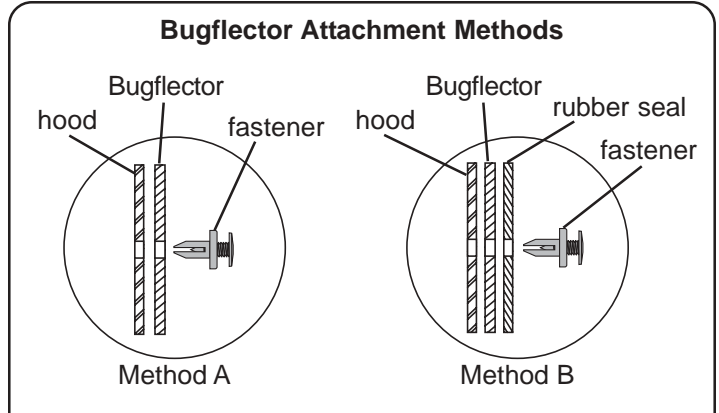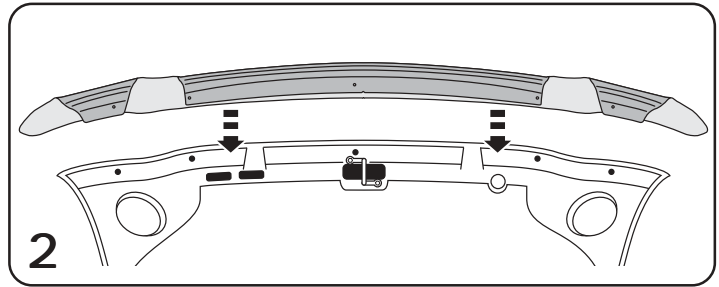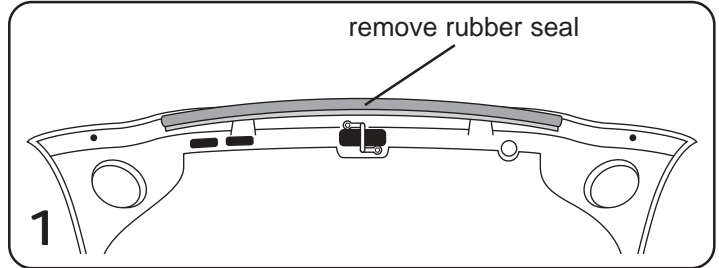

Congratulations!

You have purchased one of the many quality items manufactured by Auto Ventshade. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



AUTO VENTSHADE.
655 RACO DRIVE
LAWRENCEVILLE, GA 30245 U.S.A.
1-800-241-7219
WWW.AUTOVENTSHADE.COM

© 2003 LUND INTERNATIONAL, INC. ALL RIGHTS RESERVED.

AUTO VENTSHADE™ AND THE AUTO VENTSHADE™ LOGO ARE TRADEMARKS OF LUND INTERNATIONAL, INC.